



Ehang GHOSTDRONE Aerial Plus 2.0 Leg Replacement

Are you having problems landing your GHOSTDRONE? Follow this guide to replace the legs.

Written By: Edrees Nawabi



INTRODUCTION

In order to replace the legs, follow this guide.

Step 1 — Leg



- Flip your Drone upside-down.
- Identify the screws attaching the legs to the Drone.

Step 2



- Using the Hex 2.0 attachment to the Magnetized Driver Handle, unscrew the 4 screws attaching the legs to the Drone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:22:51 AM.